



FLUSH FIT DLUXE MIRROR

INSTALLATION INSTRUCTIONS:



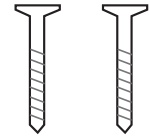

- Measure the distance between the two hole slots on the wall (170mm 6 11/16").
- Fix the screws into the wall making sure they are level and protruding out from the wall approx 13mm (1/2").
- Slot the mirror onto the screws to hang.
- When the job is complete, totally remove the protective film from the face.

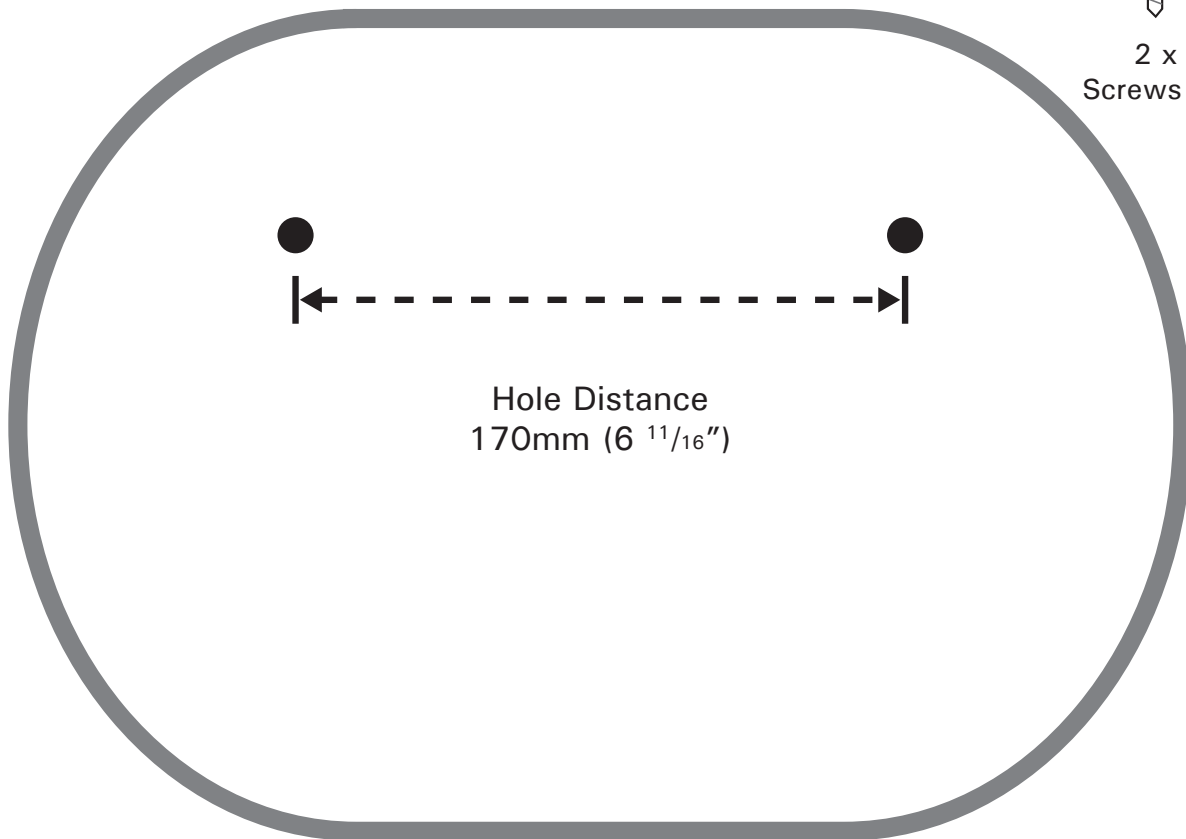

2 x Wall
Screws Supplied



SOCIAL MEDIA

-  Duravision
-  Benmirr1
-  duravision_convex_mirrors
-  bennett-mirror-technologies



CONTACT US

PO Box 2163, Tauranga
New Zealand
T: +64 7 9285380
E: mirrors@bmt.nz
www.duravision.net



5 YEAR WARRANTY

Manufactured using the highest quality materials to provide a higher level of safety and longer lasting products